











What to do if...

What to do if...

	A tire punctures	P. 460/ 461	If you have a flat tire
	The hybrid system does not start	P. 59 P. 471 P. 476	Hybrid vehicle immobilizer system If the hybrid system will not start If the 12 volt battery is discharged
	The shift lever cannot be moved out	P. 472	If the shift lever cannot be shifted from "P"
	The engine coolant temperature gauge enters the red zone	P. 480	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 473	If you lose your keys
	The battery runs out	P. 476	If the 12 volt battery is discharged
	The doors cannot be locked	P. 25	Doors
	The horn begins to sound	P. 61	Alarm
	The vehicle is stuck in mud or sand	P. 483	If the vehicle becomes stuck

 The warning light or indicator light comes on P. 438 If the warning light turns on



Warning lights

BRAKE or  P. 438	 or  P. 439
ABS or  P. 439	 P. 440
 P. 439	PASSENGER  P. 440
 P. 439	 P. 440
E  P. 440	P/S P. 439
 P. 439	PCS P. 439
 P. 440	 P. 441
 P. 438	*: Electronically Controlled Brake System

 The warning message is displayed P. 444 If the warning message is displayed